

Parental Control: Changing Your PIN Numbers

When should you change your PIN?

You should change your PIN:

- When you first get digital cable, your default PIN (Personal Identification Number) numbers are usually set up as **1234**. We recommend you change this PIN to something unique that you can remember.
- For added security, it's a good idea to change your PIN numbers on a regular basis.

Changing PIN number:

1. Press **SETTINGS** on your Bright House Networks remote control, then press **SETTINGS** again to go to **General Settings**.
2. Scroll to "**BLOCK:PIN**" using the up and down arrows on your remote control and press **SELECT**.
3. If your **PIN** is "**disabled**", you must "**enable**" it first. To do this, use the up or down arrow to choose "**change**" and press **SELECT**.
4. Enter your current four digit **PIN**.
5. Enter your new four digit **PIN**.
6. Re-enter your new four digit **PIN** for verification.
7. Press **A** to accept this change.

Use your Back button on your browser to return to Answers on Demand Home Page.