

Remote Control: Remote Quick Start

TV Button

Press the **TV** button on your remote control to turn the TV on or off.

CBL (Cable) Button

Press the **CBL** button on your remote to turn the cable box on or off. This will also turn your TV picture off.

Tip:

Generally, we recommend turning off your TV with the TV button. If you use the CBL button, there may be a slight delay when you turn your TV back on.

Changing Channels

1. There are several ways to change channels:
 - a. You can enter a channel number on your remote and press the **SELECT** button. If you do not press the **SELECT** button, your TV will still switch to that channel after a few seconds.
 - b. You can also channel surf, one channel at a time, with the **CH +/-** button.
2. Whenever you want to go back to the last channel you were on, just press the **LAST** button.

Volume

1. Press the **VOL +/-** button to increase or lower the volume of your TV.
2. Press the **MUTE** button to turn off the sound completely. When you want to restore the sound, just press the **MUTE** button again.

Use your Back button on your browser to return to Answers on Demand Home Page.